Hotpoint

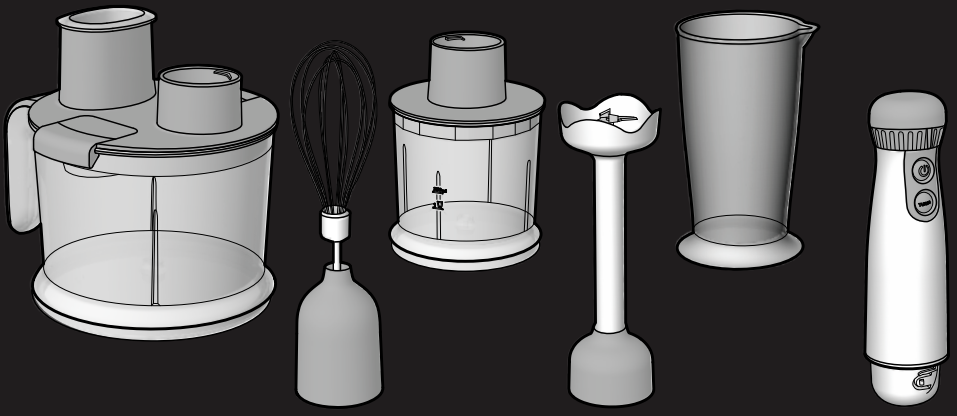

# EN Operating Instructions

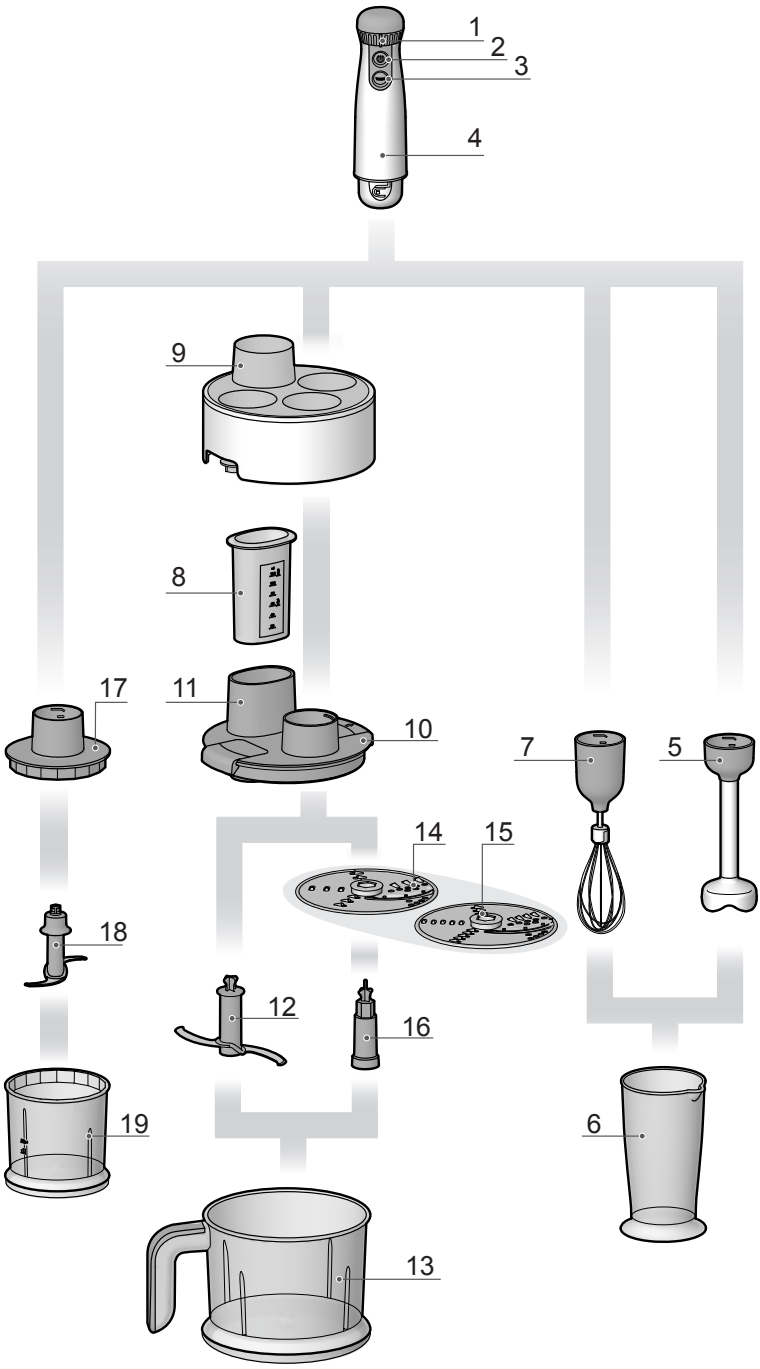


220-240V
700W

HB 07 UK

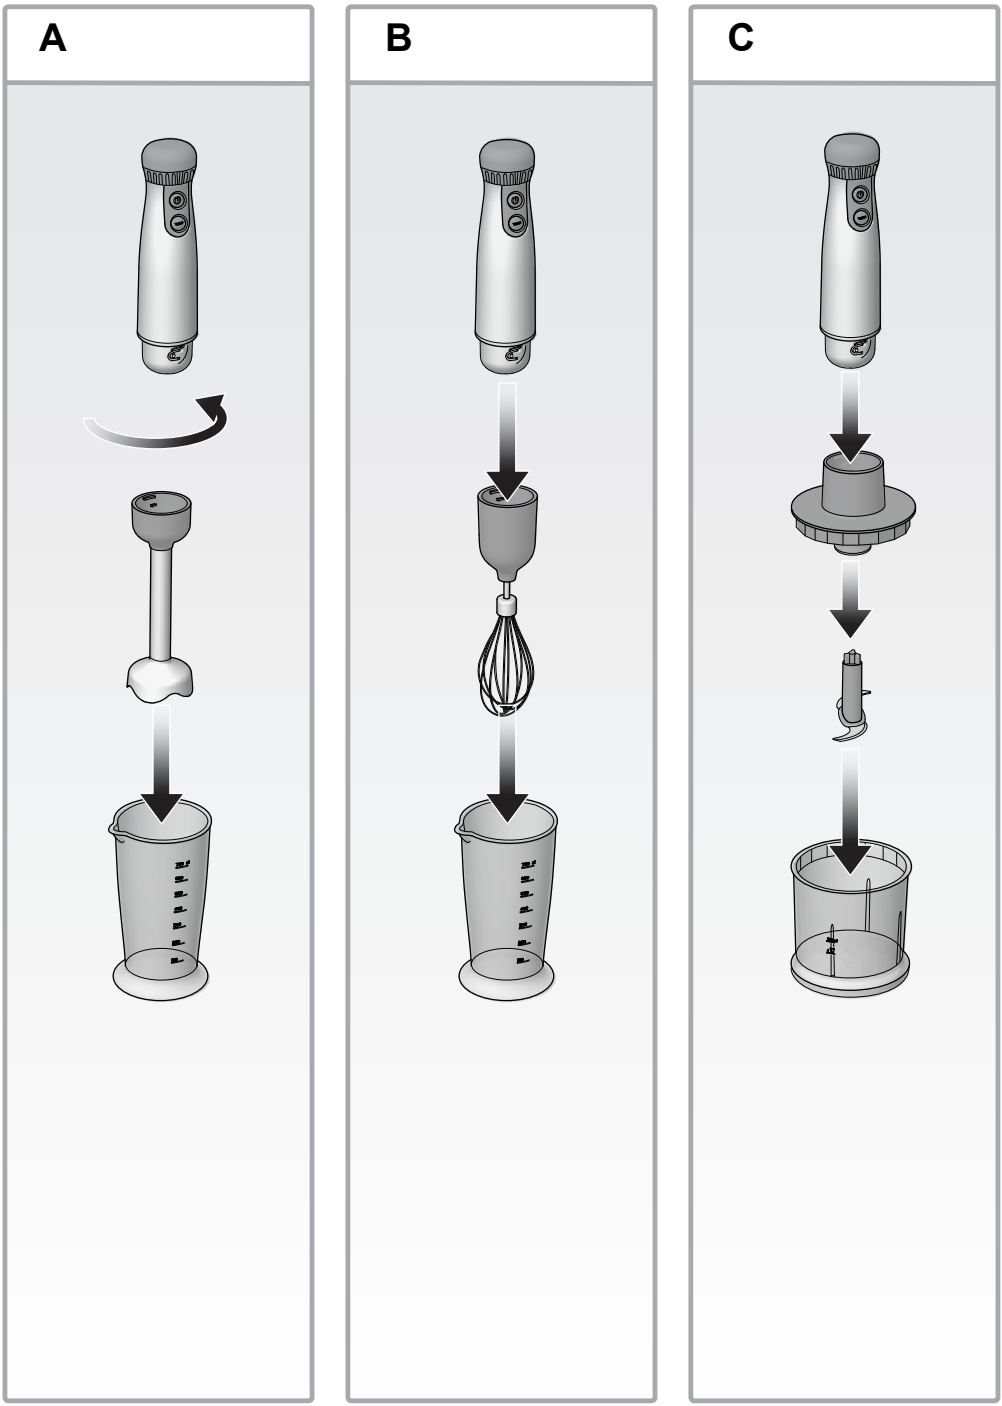
A
B
C

D

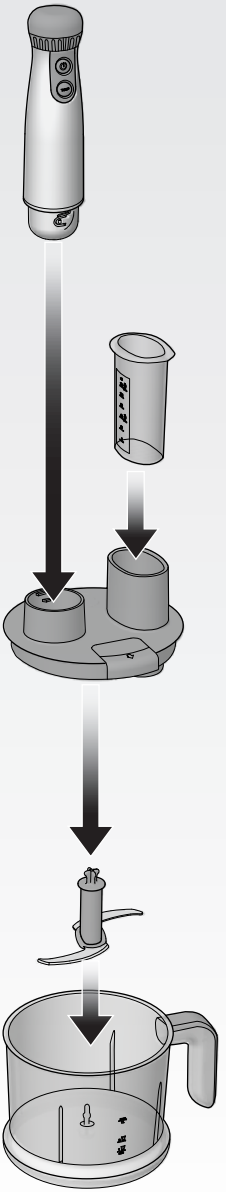

E

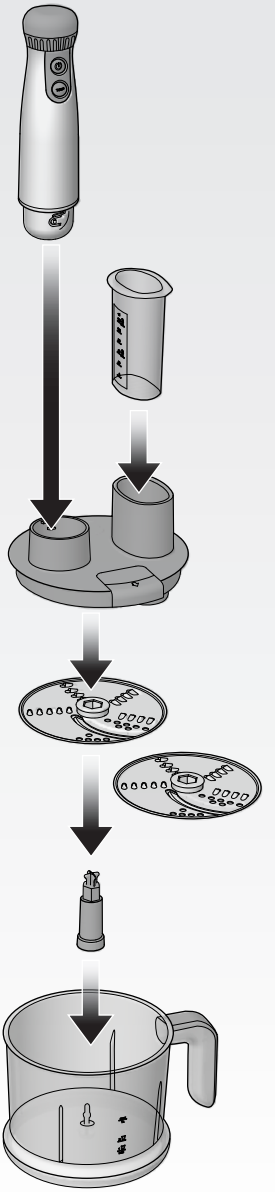

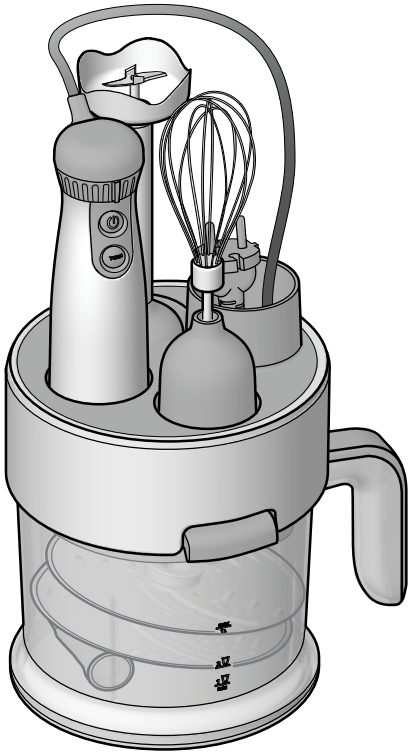

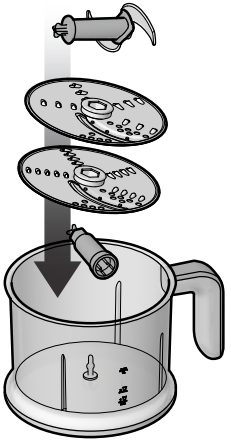

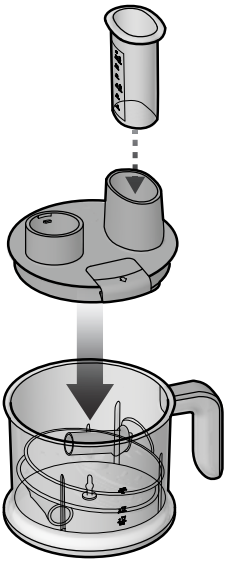

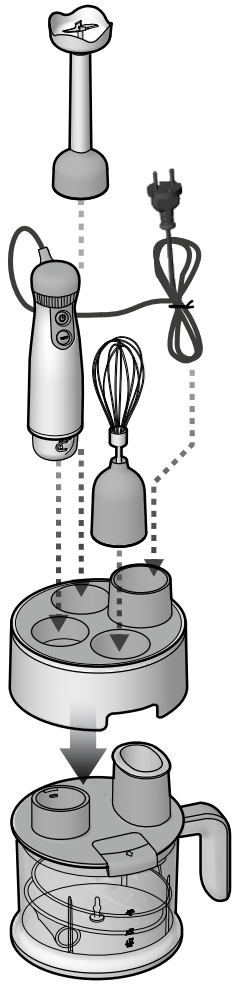

| | HB 0701 AX0 UK | HB 0703 AX0 UK | HB 0705 AX0 UK |
|---|---|---|---|
| 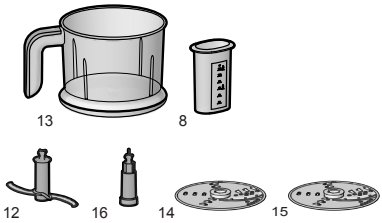 13 8 12 16 14 15 | | | ○ |
|  11 9 | | | ○ |
| 19 18 17 | | ○ | ○ |
| 7 | | ○ | ○ |
| 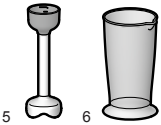 5 6 | ○ | ○ | ○ |

## PARTS AND FEATURES

1. Speed-adjusting dial
2. ON/OFF button
3. Turbo button
4. Motor unit
5. Blender attachment
6. Beaker (only on some models)
7. Whisk attachment (only on some models)
8. Food pusher (only on some models)
9. Storage unit (only on some models)
10. Big bowl lid (only on some models)
11. Feed tube (only on some models)
12. Big chopper blade (only on some models)
13. Big bowl (only on some models)
14. Shredding/slicing disc (fine) (only on some models)
15. Shredding /slicing disc (coarse/thick) (only on some models)
16. Disc shaft (only on some models)
17. Small bowl lid (only on some models)
18. Small chopper blade (only on some models)
19. Small bowl (only on some models)

## INTRODUCTION

Thank you for purchasing our product. In doing so, you have opted for an effective high-performance appliance.

These operating instructions refer to various models. An overview of the different models can be found on the illustrated pages.

If the instructions on the correct use of this appliance are not observed, the manufacturer shall assume no responsibility for any resulting damage. The operating instructions may describe different models: any difference is clearly identified.

## IMPORTANT INFORMATION ON SAFETY

Before using the electrical appliance, always follow basic safety precautions, including the following:

1. Read all the instructions.
2. Save these instructions.
3. Before using it, check that the voltage of the wall outlet corresponds to the voltage shown on the rating plate.
4. Do not operate any appliance with a damaged cord / plug. If the appliance malfunctions or is dropped or damaged in any manner return the appliance to the nearest authorised service facility for examination, repairs or electrical / mechanical adjustment.
5. If the supply cord is damaged, have it replaced by the manufacturer, an authorised service agent or a qualified technician in order to avoid hazards.
6. Unplug it from the outlet when not in use, before installing / removing any parts and before cleaning it.
7. Do not let the cord hang over the edge of a table / counter or touch any hot surfaces.
8. Do not immerse the motor unit of the blender in water, as this would give rise to electric shocks.
9. Avoid contacting moving parts.
10. Keep your hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used when the food processor is not running.
11. To avoid blunting the blade, do not use on dry or hard substances
12. Make sure the lids are securely locked in place before operating the appliance.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries or damage.
14. Do not operate the appliance for anything other than its intended use.
15. Never insert food by hand. Always use the food pusher.
16. Before disassembling the appliance, switch off the unit and wait until the blades have come to a complete stop.
17. Always remove the blade assembly before pouring any contents from the bowl.
18. Be sure to switch off the appliance after each use of your food processor. Make sure the motor stops completely before disassembling.
19. Do not put your fingers or other objects into the unit opening while it is in operation. If any food gets stuck in the opening, use the food pusher or another piece of fruit / vegetable to push it down. When this method is not possible, turn the motor off and disassemble the unit to remove the remaining food.
20. Do not attempt to tamper with the lid interlock mechanism.
21. The metal blades and disc are extremely sharp: handle with care. Always hold the blade attachments away from the cutting edges, both when handling and cleaning the unit.
22. Do not use outdoors.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been provided supervision or instructions on the use of the appliance by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. This appliance is intended to be used for household and similar applications such as:
    - staff kitchen areas in shops, offices and other working environments;
    - farm houses;
    - by clients in hotels, motels and other residential-type environments;
    - bed&breakfast-type environments.
26. Always make sure that the appliance is in good working order and that all its removable parts are secure. Regularly check the power supply cord and plug for cuts or damage.
27. Be sure your hands are completely dry before touching the switch.

## BEFORE FIRST USE

Carefully wipe the outside of the appliance to remove any dust that may have accumulated. Dust with a dry cloth. Do not immerse the supply

cord in water or other liquids.

**Blades and discs are very sharp: handle with care.**

## USING YOUR BLENDER (A)

The blender attachment is suitable for blending juices and vegetables.

1. To assemble the blender attachment to the motor unit, turn the stem clockwise until tightened.
2. Peel or core the fruits and then cut them into small pieces. Then put the fruit pieces or vegetables into the beaker. Usually a certain amount of water has to be added to facilitate smooth running, the proportion of food and water being 2:3. The mixture amount should not exceed the max capacity of the cup.
3. Plug the appliance into the power outlet.
4. Lower the hand blender into the food and rotate the speed-adjusting dial to select the desired speed. Pressing and holding the ON/OFF button, the blender starts blending immediately. For maximum-speed blending use the TURBO button for a short time.

**The speed-adjusting dial is not suitable for the TURBO button.**

**Max operation at high speed each time shall not last longer than 30 seconds.**

**Instead of the beaker, you can use any kitchen container with a suitable shape.**

### USE THE WHISK ATTACHMENT (only on some models) (B)

The whisk attachment is mainly suitable for whisking egg whites.

1. To assemble the whisk attachment to the motor unit, turn the stem clockwise until tightened.
2. Place the food into the beaker.
3. Plug the appliance into the power outlet.
4. Lower the whisk into the food and rotate the speed-adjusting dial to select the desired speed. Pressing and holding the ON/OFF button, the attachment starts whisking immediately. For maximum-speed whisking use the TURBO button for a short time.

**The speed adjusting dial cannot be used with the TURBO button.**

**Max operation at high speed each time shall not last longer than 30 seconds.**

**Instead of the beaker, you can use any kitchen container with a suitable shape.**

### USE THE SMALL BOWL FOR FINE CHOPPING (only on some models) (C)

1. First of all make sure the non-slip ring is fixed to the bottom of the bowl.
2. Fit the knife blade on the pin in the bowl - always fit the knife blade before adding the ingredients.
3. Cut the food into small pieces and put them into the bowl.

**A small amount of water can facilitate the smooth running of the appliance.**

**The mixture amount should not exceed the max capacity of the bowl.**

**Max operation at high speed each time shall not last longer than 30 seconds.**

4. Close with the lid.
5. Assemble the motor unit into the bowl lid and turn it clockwise to lock them.
6. Plug the appliance into the power outlet.
7. Rotate the speed-adjusting dial to select the desired speed. Pressing and holding the ON/OFF button, the attachment starts chopping immediately. For maximum speed press the TURBO button for a short time.

**The speed adjusting dial cannot be used with the TURBO button.**

**Never remove the lid until the blade has come to a complete stop.**

8. Remove the knife blade first before pouring out the mixture.

**The knife blade is very sharp: take care when handling. Max operation at high**

**speed each time shall not last longer than 30 seconds.**

## USING THE FOOD PROCESSOR ATTACHMENT

To use the chopping bowl (only on some models):

1. First of all make sure the non-slip ring is fixed to the bottom of the bowl.
2. Fit the knife blade on the pin in the bowl - always fit the knife blade before adding the ingredients.
3. Cut the food into small pieces and put them into the bowl.

**A small amount of water can facilitate the smooth running of the appliance.**

**The mixture amount should not exceed the max capacity of the bowl.**

**Max operation at high speed each time shall not last longer than 30 seconds.**

4. Align the two fasteners of the bowl lid with the two clip positions of the bowl and push down to lock them in place. Be sure to align the arrow on the lid and the arrow on the bowl.

**The fasteners must be locked in the two clip positions, otherwise during operating the bowl lid may rotate as the motor rotates.**

**Make sure the food pusher is properly fitted into its housing on the cover.**

5. Assemble the motor unit into the bowl lid and turn it clockwise to lock them.
6. Plug the appliance into the power outlet.
7. Rotate the speed-adjusting dial to select the desired speed. Pressing and holding the ON/OFF button, the attachment starts chopping immediately. For maximum speed press the TURBO button for a short time.

**The speed adjusting dial cannot be used with the TURBO button.**

**Never remove the lid until the blade has come to a complete stop.**

8. Remove the knife blade first before pouring out the mixture.

**The knife blade is very sharp: take care when handling.**

**Max operation at high speed each time shall not last longer than 30s.**

### Using the bowl and shredding/slicing discs for processing (only on some models) (E).

1. First of all make sure the non-slip base is fixed to the bottom of the bowl.
2. Then insert the disc shaft into the pin on the bottom of the bowl, select the desired shredding/slicing disc (fine or coarse) and assemble the shredding /slicing disc onto the shaft with the appropriate side upwards (one side is for shredding, the other side is for slicing).

**Extreme caution must be taken when handling discs as they are very sharp.**

Pull the two fasteners towards the outside to fit the lid onto the bowl, making sure the lid arrow is aligned with the bowl arrow.

**The fasteners must be locked in the two clip positions, otherwise during operating the bowl lid may rotate as the motor rotates.**

3. Insert the bottom part of the motor unit into the opening on the bowl lid, and turn it clockwise to lock.
4. Plug the appliance into the power outlet.
5. Put the food inside the feeding tube and push it slowly with the food pusher. Do not push heavily.
6. Rotate the speed-adjusting dial to select the desired speed. Pressing and holding the ON/OFF button, the attachment starts chopping immediately. For maximum speed press the TURBO button for a short time.

**The speed adjusting dial cannot be used with the TURBO button.**

**Never remove the lid until the cutting disc has come to a complete stop.**

**⚠ Never introduce very hard foods (e.g. hard chocolate), ice or frozen foods when using shredding or slicing attachments.**

### TIPS

- Use the shredding side for carrots, potatoes and foods of a similar texture.
- Use the slicing side for food items such as carrots, potatoes, cabbages, cucumbers, courgettes and onions.
- Use fresh ingredients.
- Do not cut food too small. Fill the feed tube uniformly. This prevents the food from pouring out during processing.

## STORAGE SYSTEM (F)

When not in use, the detachable stem, whisk and motor unit can be stored on the bowl lid.

**When placing the discs inside the bowl for storage, make sure the cutting edges do not scratch the bowl walls.**

## CLEANING AND MAINTENANCE

Unplug the appliance from the power supply before cleaning.

1. Wash the blender attachments and lids under running water without any abrasive cleaners or detergents. After cleaning, place them upright so that any water that may have got in can drain out.

**⚠ Do not immerse the blender and lids in water, as the lubrication on the bearings may be washed away over time.**

2. Wash the containers and whisk in warm soapy water. All removable parts can be washed in warm soapy water and then carefully rinsed and dried. If necessary, use a nylon-bristle brush to complete the cup cleaning operation.
3. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning purposes, as electric shocks may occur.
4. The non-slip base on the bottom of the bowl can be removed and cleaned. Make sure it is re-placed correctly before using it again.
5. Dry all detachable parts thoroughly.

**⚠ Blades are very sharp: handle with care.**

### TIP

For quick cleaning between processing tasks, fill the cup or bowl with water halfway, assemble the hand-held blender according to the description in the operation section and start the blending / chopping function for a few seconds.

## GUARANTEE

**12 months Parts and Labour Guarantee**

This certificate of guarantee represents the guarantee (“Guarantee” hereinafter) offered by Indesit Company UK Limited with registered office at Peterborough PE2 9JB in relation to products purchased in the United Kingdom and Indesit Ireland Limited with registered office in Dublin 9, Ireland for products purchased in the Republic of Ireland. This Guarantee does not affect your statutory rights.
Your product has the benefit of our manufacturer’s Guarantee, which covers the product for twelve months from the date of purchase.
This gives you the reassurance that if, within that time, your product is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the product at no cost to you.
This Guarantee is subject to the following conditions:

- Documentary proof of original purchase date is provided.
- Cosmetic damage must be reported within 14 days from the date of purchase.
- The product has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The product is used only on the electricity supply printed on the rating plate.
- The product has been used for normal domestic purposes only.
- The product has not been altered, serviced, maintained, dismantled, or otherwise interfe-

red with by any person not authorised by us.
- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any product that is replaced become our property.
- The product is used in the United Kingdom or Republic of Ireland.

The Guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.
- Accidental damage, this includes but is not limited to, damage which occurs as a result of an external action.
- Replacement of any consumable item or accessory. These include but are not limited to:
- plugs, cables, light bulbs, hoses, brushes, covers and filters.
- Replacement of any removable parts made of glass or plastic.

## After Sales Service

No one is better placed to care for your Hotpoint product during the course of its working life than us – the manufacturer.

## Essential Contact Information Advice Line

We have a dedicated team who can provide free advice and assistance with your product if you experience any technical difficulties. Simply call our Hotpoint Service Hotline on 08448 240 055 **(Republic of Ireland 0818 904 041)** for telephone assistance.
**Please note:**

**Our advisors will require the following information:**

Model number: _____

Serial number: _____

## Consumables and Accessories

We supply a full range of consumables and accessories to keep your product functioning efficiently throughout its life.

**UK: 08448 225 225**
**Republic of Ireland: 0818 313 413**
**www.hotpoint.co.uk**

## Recycling and Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.
Please dispose of packaging and old products carefully.

**Register your new product and get a second year FREE!**

We want to give you additional benefits of ownership of your product and offer you an additional free 1 year guarantee when you register your product with Hotpoint within 28 days of purchase. If you do not register your product with Hotpoint within 28 days, your product is guaranteed for 1 year only.

To activate your 2 year guarantee register with us online at www.hotpoint.co.uk. Please note that the 2 year guarantee is only available in UK and Ireland and is subject to the same conditions as the 1 year Guarantee. Please refer to the certificate of guarantee for more information.

# DISPOSAL OF OLD ELECTRICAL APPLIANCES

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.
Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Hotpoint

Indesit Company UK Ltd
Morley Way,
Peterborough PE2 9JB

www.indesitcompany.com

HB 07 UK
02/2013 - ver.1.1